

Data Sheet & Installation Instructions

ATTW-U-3

Wall Mount Temperature Transmitter



Supplied by

247cable.com

Call us on +44 (0)118 916 9420 | Email info@247able.com

ATTW-U-3

Wall Mount Temperature Transmitter




Installation

1. Choose an accessible location for the sensor where the surrounding air temperature is representative of the room. Avoid locating the sensor where it will be subjected to radiant heat.
2. Remove the knockout section from the back plate.
3. Fix the back plate to the wall with washers using the holes provided.
4. Insert cable and connect power wires to terminals +IN and 0V, then connect signal wires to either TI or TV and 0V.
5. Clip the sensor onto the back plate making sure that the cables are routed through the cable exit.

Wiring Details

Sensor

Temperature Sensor: PT100 1
 Temperature Accuracy: + / - 0.5°C 2:
 Output: 4-20mA or 0-10V user selectable**
 Range: -10 °C to +110 °C

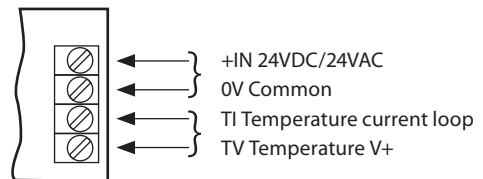

***Temperature range must be specified at order stage**

**** Jumper Position:-**

Installed on 2 pins = 4-20mA

Installed on 1 pin or removed = 0-10V

Registered Address

ABLE Instruments & Controls Ltd
 Cutbush Park, Danehill, Lower Earley,
 Reading, Berkshire, RG6 4UT. UK.

Phone

+44 (0)118 9311188

Email

info@able.co.uk

Web

able.co.uk

E-commerce

247able.com



Registered in England No. 01851002. VAT No. GB 417 2481 61